



BOOT SIZE & PROPER LACE SIZE

BOOT	185	190	195	200	205	210	215	220	225	230	235	240	245	250	255	260	265	270	275	280	285	290	295	300	305	310	
WAVE	200												220														
MOTIVO	200			220			240			260			280			300											
OVERTURE		200		220			240			260			280			300											
CHORUS					220			240			260			280			300										
CONCERTO									240			260			280			300									
SHOWGIRL 4 HOOK									220		240			260													
ICE FLY					220			240			260			280			300										
FLAMENCO ICE									240			260			280			300									
PIANO									240			260			280			300									
RONDO		200		220			240			260			280			300											
RITMO									240			260			280			300									
FLY									240			260			280			300									
FLAMENCO									240			260			280			300									
CLASSICA									240			260			280			300									